

## MIRACLE 360

### (EN) Anchor Device / (TR) Ankraj Cihazı

EN 795:2012 Type A and CEN/TS 16415:2013 Type A



### (EN) Confirmation Certificate / (TR) Doğrulama Sertifikası

QUINTIN CERTIFICATION

825 Route de Romans 38160 Saint Antonie l'Abbaye – France  
Tel: + 33 7 66 29 39 28  
web: [www.quintincertifications.com](http://www.quintincertifications.com)

**ARGA İŞ GÜVENLİĞİ VE ENDÜSTRİYEL ÜRÜNLER TİC. A.Ş.**







Tuna Mah. 5500/3 Sok. Irmak Plaza No: P.K.:35090 Çamdibi - Bornova - İZMİR / TÜRKİYE

T:+90 232 469 69 39

F: +90 232 457 50 57 [info@argasafety.com](mailto:info@argasafety.com)

[www.argasafety.com](http://www.argasafety.com)

Page 1 / 18
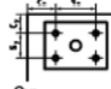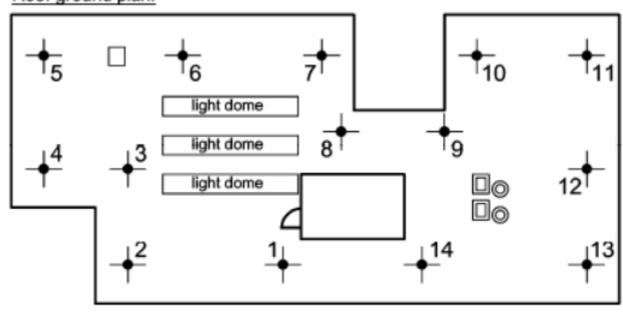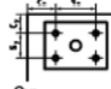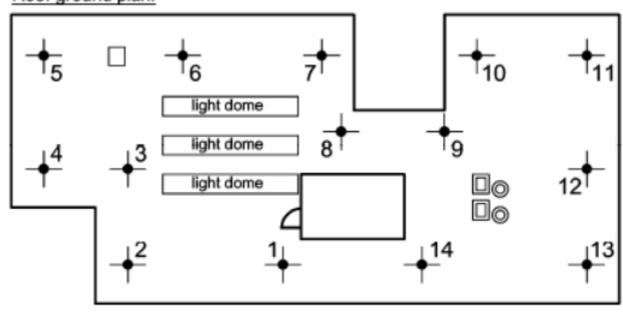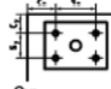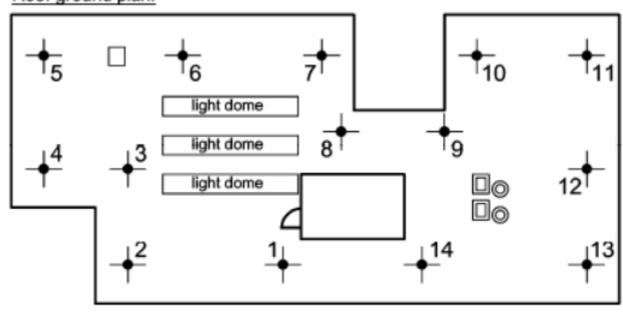
|   |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
|---|---|--|---|---|---|--|--|--|--|--|--|--|--|--|--|--|--|
| <h1>ARGA</h1>   | <h2>SCHEMATIC INSTALLATION PLAN</h2>  |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| <b>Customer</b>   |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| Name:   | Contact Person:   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| Adress:   | Phone:  |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| <b>Building /Structure Location</b>   |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| Name:   | Order No:   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| Adress:   | Building Type:  |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
|   | Anchor Device:  |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| <b>Installer</b>  |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| Name:   | Chief Istaller:   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| Adress:   | Phone:  |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| <b>Anchor Device</b>  |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| Manufacturer:   |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| Model/Type Identification:  |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| <b>Building Component</b>   |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| Component 1:  | Quality:  |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| Component 2:  |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| Building Material:  |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| <b>Building Component</b>   |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| The installer has to define a drawing   |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| <table style="width:100%; border: none;"> <tr> <td style="width:25%; border: none;"> <b>Fixing data</b><br/> <input type="checkbox"/> data not required if through fixed<br/>                     Real situation:                 </td> <td style="width:25%; border: none;">                     Drill-hole diamt : _____ mm<br/>                     Drill-hole depth : _____ mm<br/>                     Torque : _____ Nm<br/>                     Edge distance Cx: _____ Cy: _____<br/>                     Axial spacing Sx: _____ Sy: _____                 </td> <td style="width:15%; border: none;">  </td> <td style="width:35%; border: none;">                     Type: _____<br/>                     Material: _____<br/>                     Min. edge distance (c): _____<br/>                     Min. axial spacing (s): _____<br/>                     Min. component thickness: _____<br/>                     Permissible tensile force: _____<br/>                     Permissible shear force: _____                 </td> </tr> <tr> <td colspan="4" style="border: none;"> <b>Remarks:</b><br/>                     Drilling method: <input type="checkbox"/> Hammer <input type="checkbox"/> Drill-hole cleaning <input type="checkbox"/> Impact System <input type="checkbox"/> yes <input type="checkbox"/> wet <input type="checkbox"/> no <input type="checkbox"/> dry<br/> <input type="checkbox"/> Rotary <input type="checkbox"/> Torque controlled spanner <input type="checkbox"/> Fixing test device <input type="checkbox"/> System <input type="checkbox"/> yes <input type="checkbox"/> no<br/>                     Testing device:                 </td> </tr> <tr> <td colspan="4" style="border: none;"> <b>CHECK LIST:</b><br/> <input type="checkbox"/> Substrate as expected (no doubt on capacity)<br/> <input type="checkbox"/> Installation complies with manufacturer's instructions<br/> <input type="checkbox"/> Recommended fixings used<br/> <input type="checkbox"/> All fixings photographed with identification number<br/> <input type="checkbox"/> Fixings exposed<br/> <input type="checkbox"/> Installation plan placed on site →<br/> <input type="checkbox"/> Screw securing by through hole fixing technology<br/> <input type="checkbox"/> Additional information _____                 </td> </tr> <tr> <td colspan="4" style="border: none;"> <b>Roof ground plan:</b><br/>  </td> </tr> </table> |   | <b>Fixing data</b><br><input type="checkbox"/> data not required if through fixed<br>Real situation: | Drill-hole diamt : _____ mm<br>Drill-hole depth : _____ mm<br>Torque : _____ Nm<br>Edge distance Cx: _____ Cy: _____<br>Axial spacing Sx: _____ Sy: _____   |  | Type: _____<br>Material: _____<br>Min. edge distance (c): _____<br>Min. axial spacing (s): _____<br>Min. component thickness: _____<br>Permissible tensile force: _____<br>Permissible shear force: _____ | <b>Remarks:</b><br>Drilling method: <input type="checkbox"/> Hammer <input type="checkbox"/> Drill-hole cleaning <input type="checkbox"/> Impact System <input type="checkbox"/> yes <input type="checkbox"/> wet <input type="checkbox"/> no <input type="checkbox"/> dry<br><input type="checkbox"/> Rotary <input type="checkbox"/> Torque controlled spanner <input type="checkbox"/> Fixing test device <input type="checkbox"/> System <input type="checkbox"/> yes <input type="checkbox"/> no<br>Testing device: |  |  |  | <b>CHECK LIST:</b><br><input type="checkbox"/> Substrate as expected (no doubt on capacity)<br><input type="checkbox"/> Installation complies with manufacturer's instructions<br><input type="checkbox"/> Recommended fixings used<br><input type="checkbox"/> All fixings photographed with identification number<br><input type="checkbox"/> Fixings exposed<br><input type="checkbox"/> Installation plan placed on site →<br><input type="checkbox"/> Screw securing by through hole fixing technology<br><input type="checkbox"/> Additional information _____ |  |  |  | <b>Roof ground plan:</b><br> |  |  |  |
| <b>Fixing data</b><br><input type="checkbox"/> data not required if through fixed<br>Real situation:  | Drill-hole diamt : _____ mm<br>Drill-hole depth : _____ mm<br>Torque : _____ Nm<br>Edge distance Cx: _____ Cy: _____<br>Axial spacing Sx: _____ Sy: _____ |                   | Type: _____<br>Material: _____<br>Min. edge distance (c): _____<br>Min. axial spacing (s): _____<br>Min. component thickness: _____<br>Permissible tensile force: _____<br>Permissible shear force: _____ |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| <b>Remarks:</b><br>Drilling method: <input type="checkbox"/> Hammer <input type="checkbox"/> Drill-hole cleaning <input type="checkbox"/> Impact System <input type="checkbox"/> yes <input type="checkbox"/> wet <input type="checkbox"/> no <input type="checkbox"/> dry<br><input type="checkbox"/> Rotary <input type="checkbox"/> Torque controlled spanner <input type="checkbox"/> Fixing test device <input type="checkbox"/> System <input type="checkbox"/> yes <input type="checkbox"/> no<br>Testing device:  |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| <b>CHECK LIST:</b><br><input type="checkbox"/> Substrate as expected (no doubt on capacity)<br><input type="checkbox"/> Installation complies with manufacturer's instructions<br><input type="checkbox"/> Recommended fixings used<br><input type="checkbox"/> All fixings photographed with identification number<br><input type="checkbox"/> Fixings exposed<br><input type="checkbox"/> Installation plan placed on site →<br><input type="checkbox"/> Screw securing by through hole fixing technology<br><input type="checkbox"/> Additional information _____  |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| <b>Roof ground plan:</b><br>  |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| <b>Required pull-out force (kN), required torque (Nm) achieved?</b>   |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| Anchor point 1  | Anchor point 5  | Anchor point 9   |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| Anchor point 2  | Anchor point 6  | Anchor point 10  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| Anchor point 3  | Anchor point 7  | Anchor point 11  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| Anchor point 4  | Anchor point 8  | Anchor point 12  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| <b>Additional Fixings:</b>  |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| Remarks by the chief installer  |   |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |
| Date:   | Signature:  |  |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |

(EN) Label / (TR) Etiket

| ANCHOR DEVICE / ANKRAJ CİHAZI |   |             |  |
|-------------------------------|---|-------------|--|
| 1                             | Product Name / Ürün Adı   | MIRACLE 360 | <br><br><br>EN 795 :2012 Type A<br>CEN/TS 16415 Type A<br>info@argasafety.com<br>www.argasafety.com |
| 2                             | Anchor Height / Ankraj Yüksekliği   | 7,0 m       |  |
| 3                             | Anchor Arm Length / Ankraj Kol Uzunluğu   | 1,5 m       |  |
| 4                             | Anchor Rotation Angle / Ankraj Dönüş Açısı  | 360°        |  |
| 5                             | Max. User Person / En fazla Kullanıcı   | 2 Person    |  |
| 6                             | Manufacturing Date / Üretim Tarihi  | 03/2023     |  |
| 7                             | Serial Number / Seri No   | A230001     |  |
| 8                             | Installation Cheif / Kurulum Personeli  |             |  |
| 9                             | Installation Date / Kurulum Tarihi  |             |  |
| 10                            | Next Inspection Date / Bir Sonraki Kontrol Tarihi   |             |  |
| 11                            | ARGA İŞ GÜVENLİĞİ VE ENDÜSTRİYEL ÜRÜNLER A.Ş.<br>Tuna Mahallesi 5500/3 Sokak Irmak Plaza No:2 P.K.:35090 Çamdibi - Bornova/ İZMİR/TURKİYE |             |  |


**Anchor Device / Ankraj Cihazı**

**Information Label (EN) / Ürün Bilgi Etiketi (TR)**

- 1- Product description / **Ürün Tanımı**
- 2- Model Name / **Model Adı**
- 3- Height / **Yükseklik**
- 4- Anchor Arm Length / **Ankraj Kol Uzunluğu**
- 5- Anchor Arm Length / **Ankraj Kol Uzunluğu**
- 6- Maximum User / **Maksimum Kullanıcı Sayısı**
- 7- Manufactured Date (MM:Month, YY:Year) / **Üretim Yılı (AA:Yıl, YY:Yıl)**
- 8- Serial Number / Seri No (ADDZZZZ) A: Arga Safety, DD: Installation Date ZZZ: Number of instalaltion
- 9- Standards / Standartlar
- 9- Installation Cheif / **Kurulum Personeli**
- 10- Installation Date / **Kurulum Tarihi**
- 11- Next Inspection Date / **Kurulum Tarihi**
- 12- Trade Mark / **Ticari Marka**
- 13- Read User Guide / **Kullanım Kılavuzunu Oku**
- 14- CE / CE
- 15- Standard/ **Standart**
- 16- Producer mail adress / **Üretici mail adresi**

## (EN) Installation / (TR) Montaj (Kurulum)

(EN) Figure-1 / (TR) Şekil-1

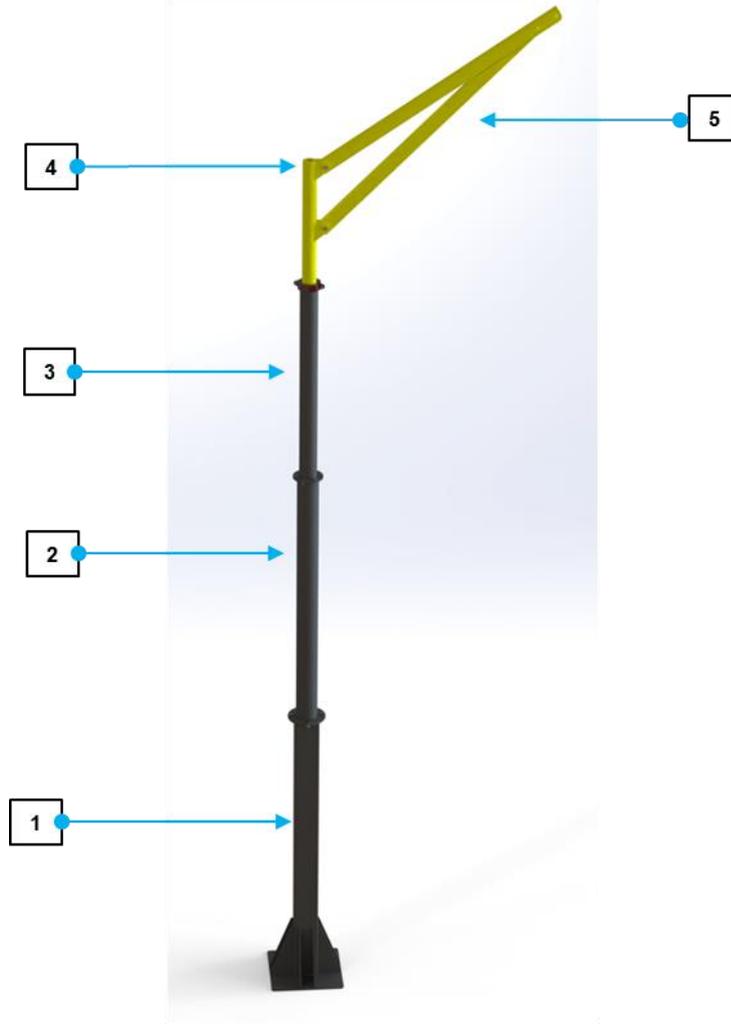

### (EN) MIRACLE 360

#### Products Components


- 1- M1S-160 First Step 160x160x6 mm
- 2- M2S-160 Second Step 140x6 mm
- 3- M3S-114 Third Step 114x6 mm
- 4- M4S-89 Fourth Step 89x5 mm
- 5- MC-150 Console

### (TR) MIRACLE 360

#### Ürün Parçaları

- 1- M1S-160 Birinci Kademe 160x160x6 mm
- 2- M2S-160 İkinci Kademe 140x6 mm
- 3- M3S-114 Üçüncü Kademe 114x6 mm
- 4- M4S-89 Dördüncü Kademe 89x5 mm
- 5- MC-150 Konsol

(EN) Figure-2 / (TR) Şekil-2

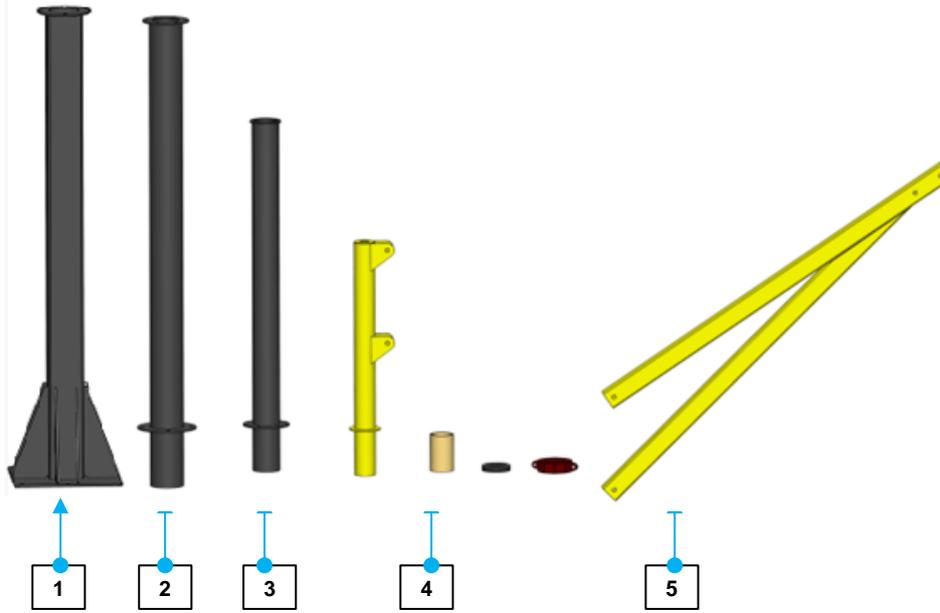

## (EN) MIRACLE 360


### Products Components


- 1- M1S-160 First Step 160x160x6 mm
- 2- M2S-160 Second Step 140x6 mm
- 3- M3S-114 Third Step 114x6 mm
- 4- M4S-89 Fourth Step 89x5 mm
- 5- MC-150 Console


## (TR) MIRACLE 360





### Ürün Parçaları


- 1- M1S-160 Birinci Kademe 160x160x6 mm
- 2- M2S-160 İkinci Kademe 140x6 mm
- 3- M3S-114 Üçüncü Kademe 114x6 mm
- 4- M4S-89 Dördüncü Kademe 89x5 mm
- 5- MC-150 Konsol

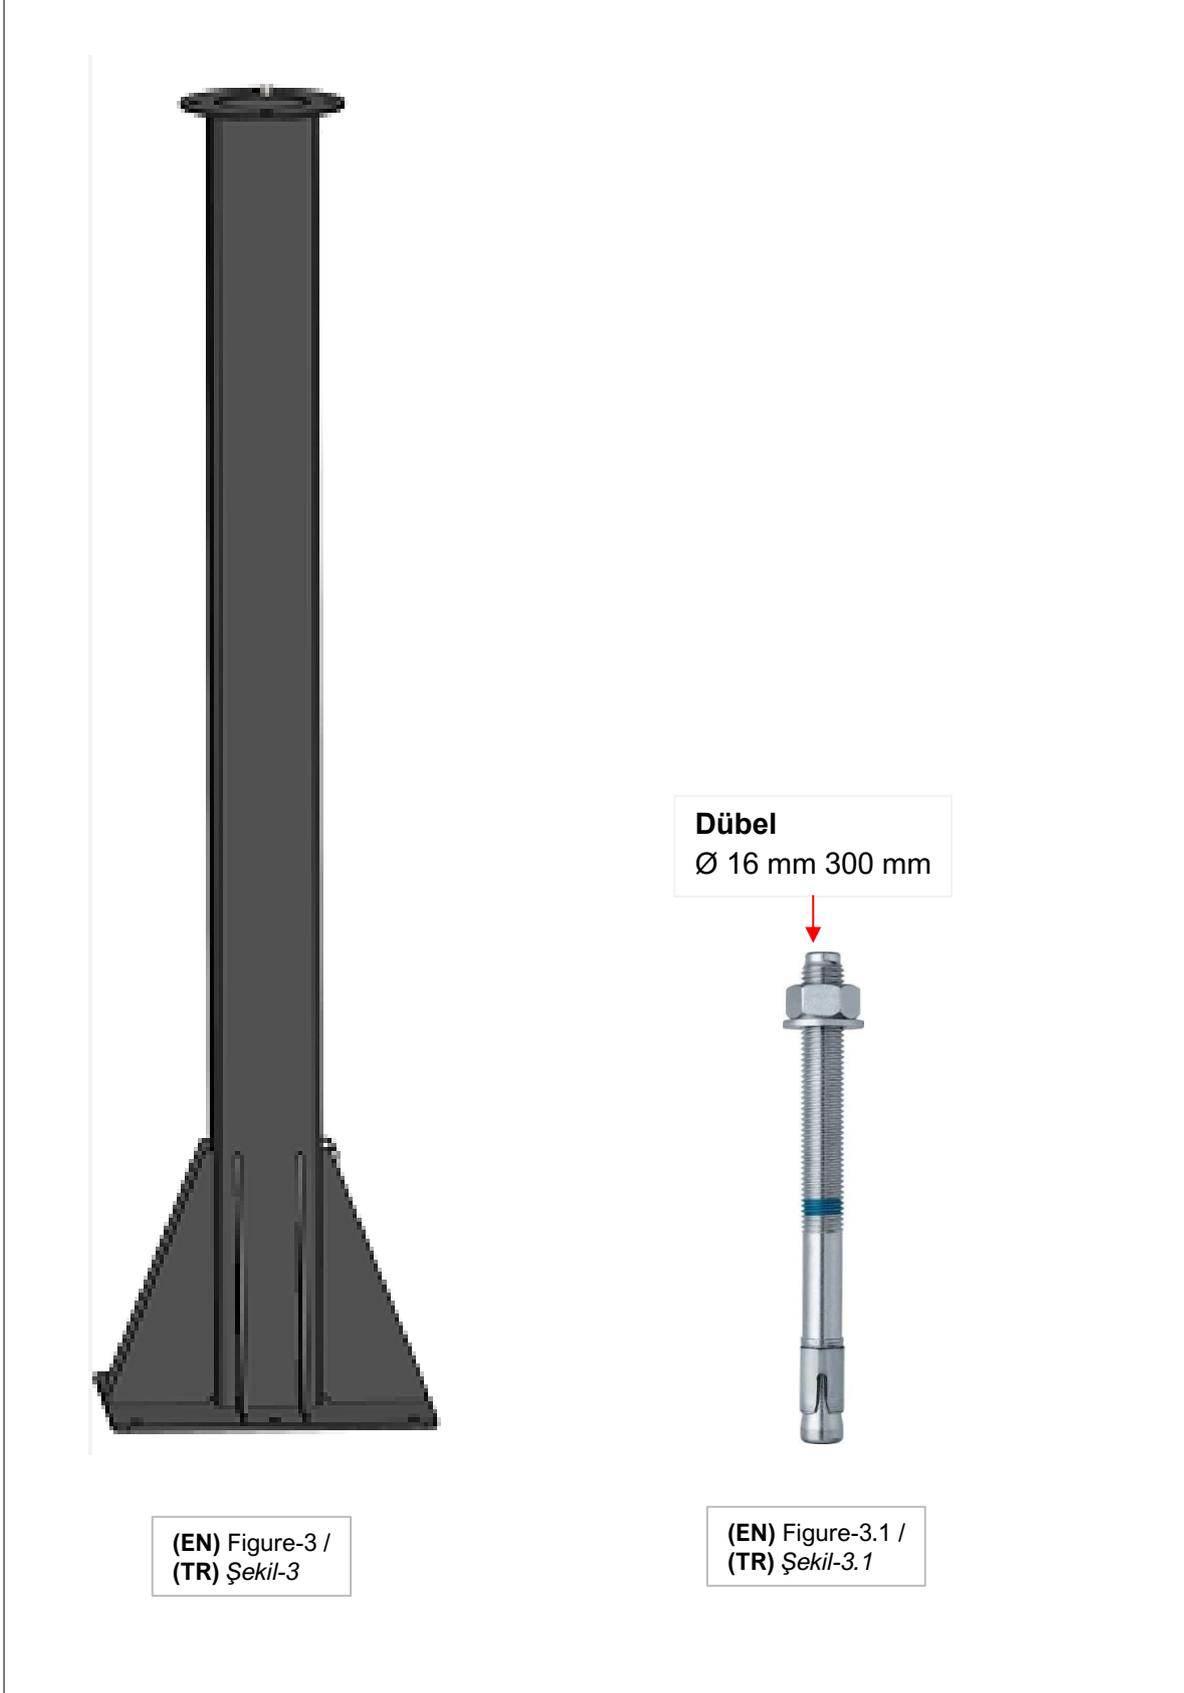

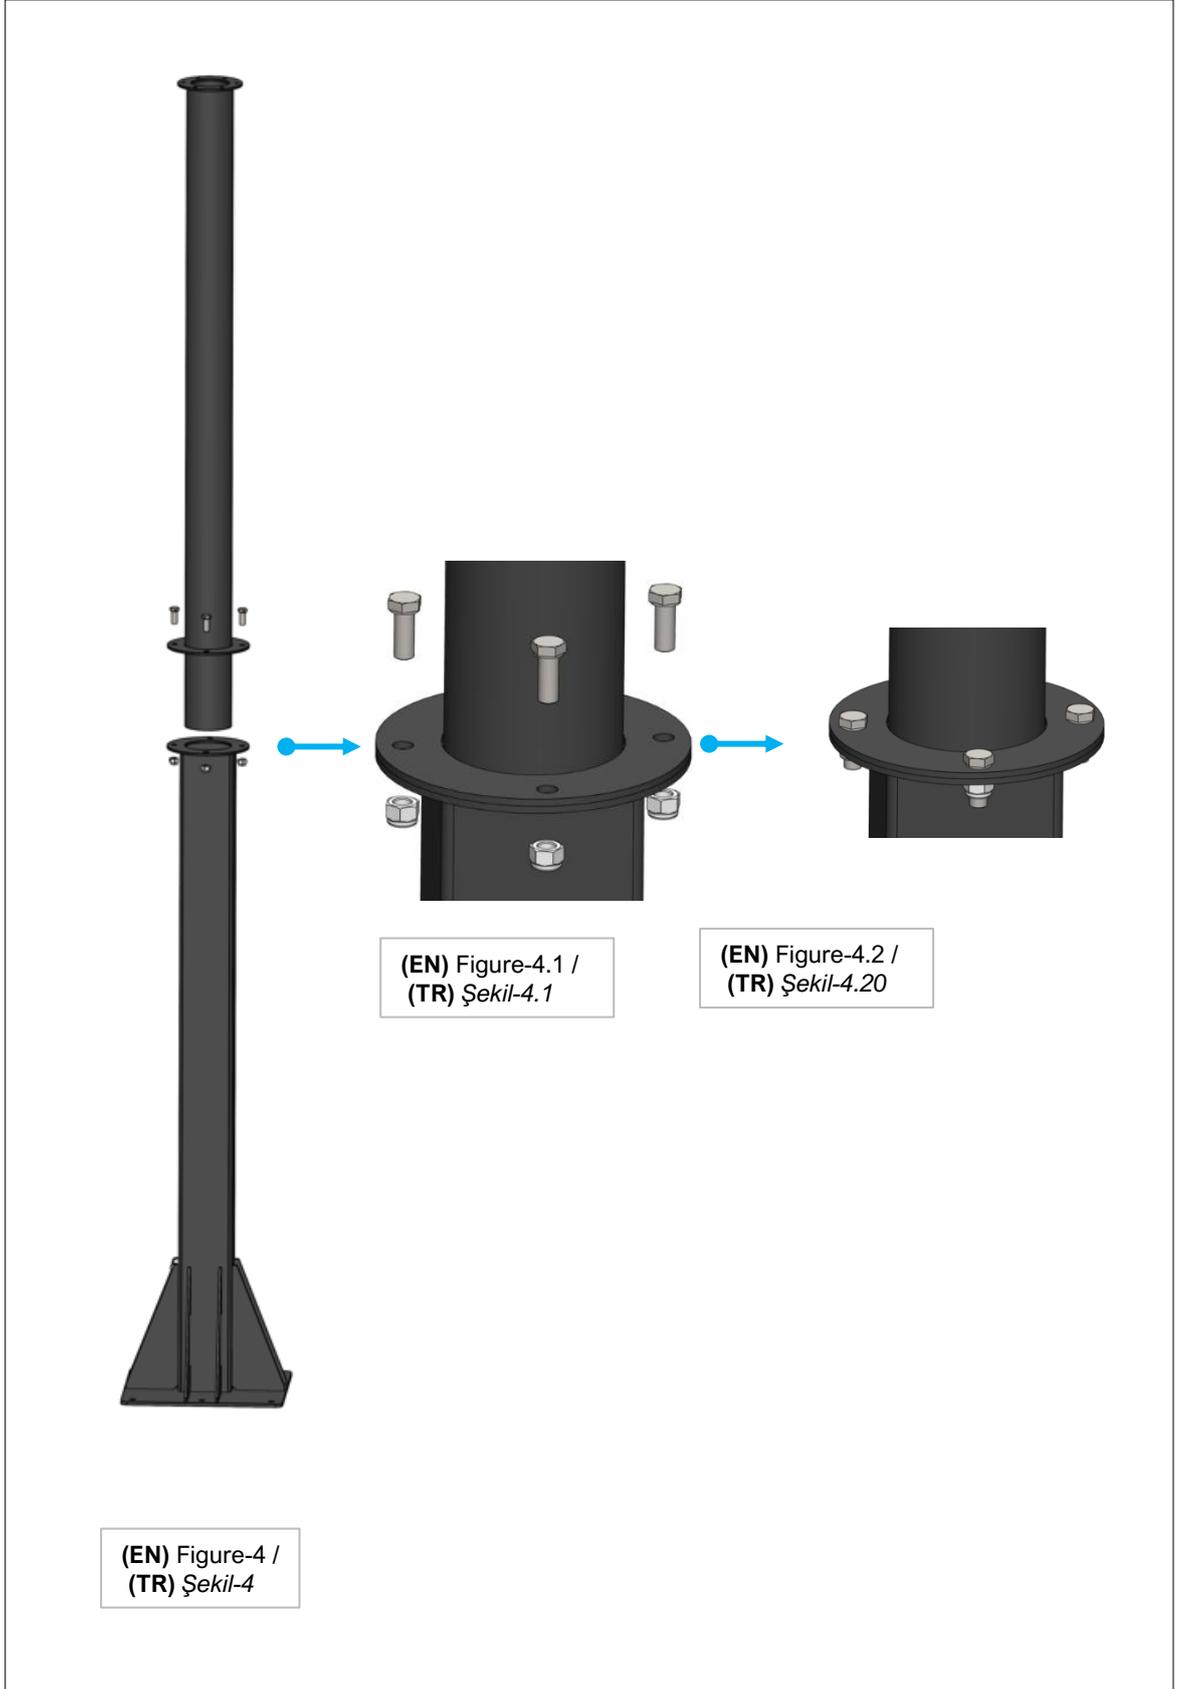


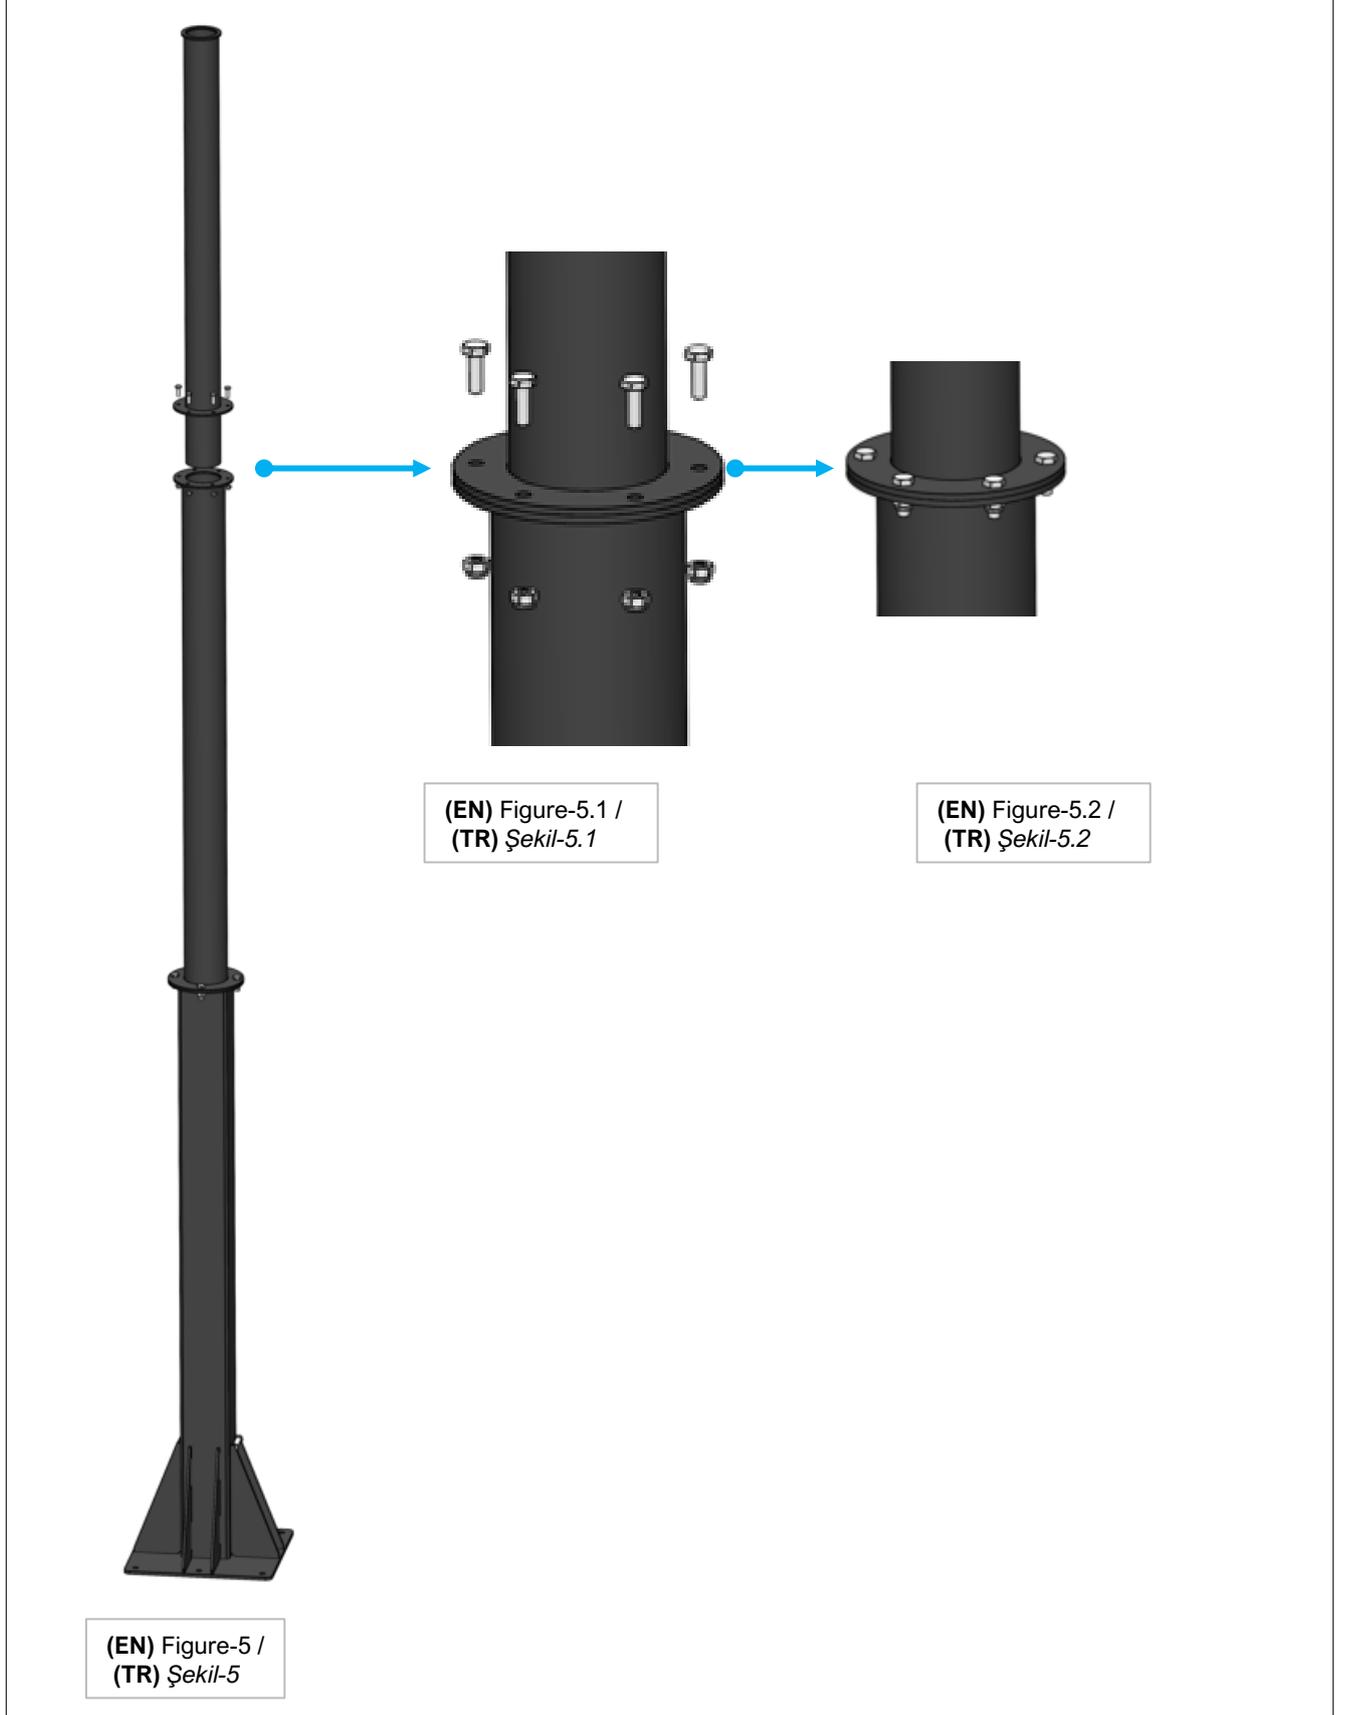

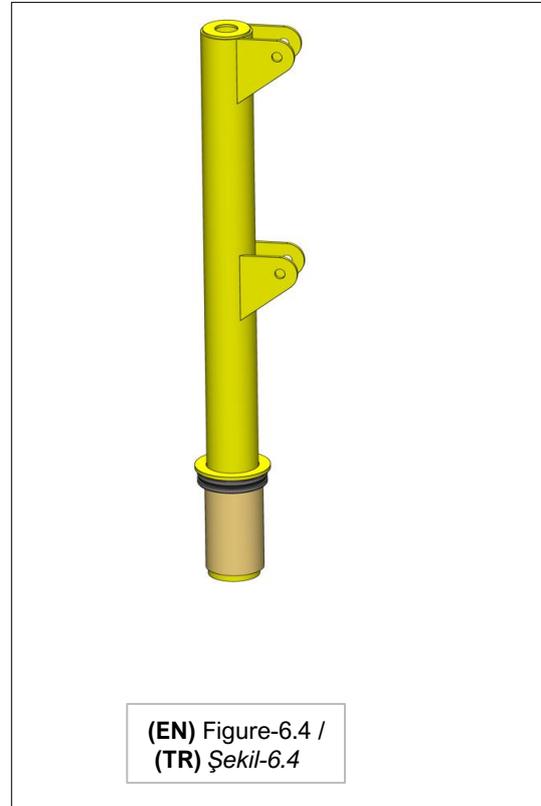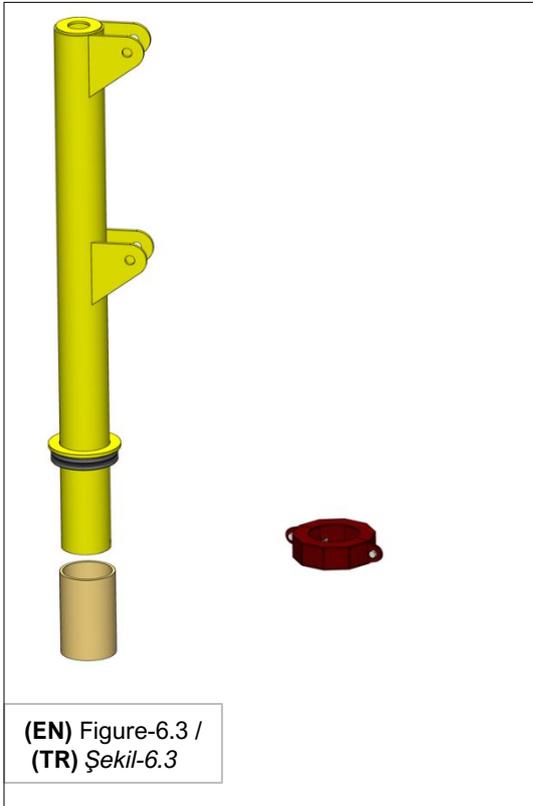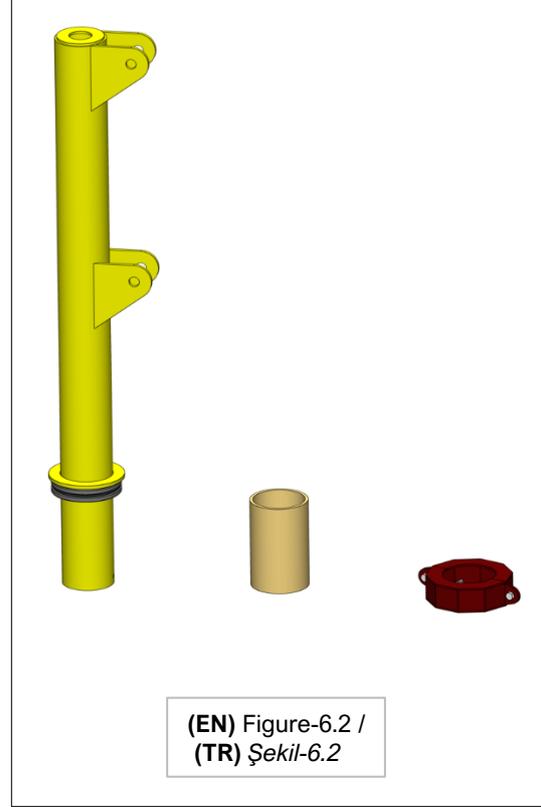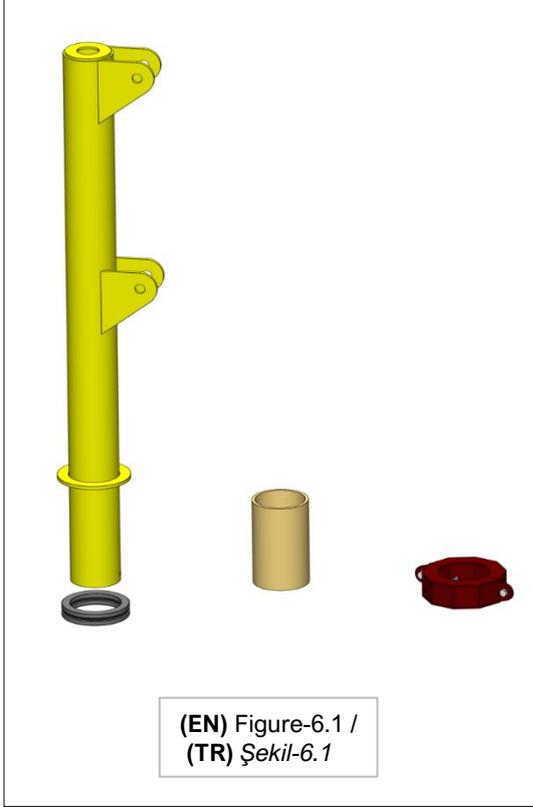


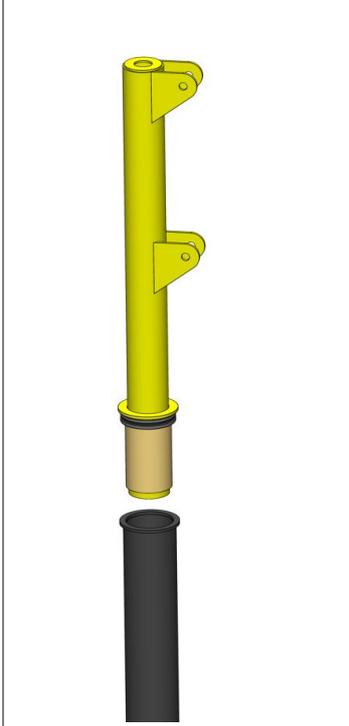


(EN) Figure-6.5 /  
(TR) Şekil-6.5

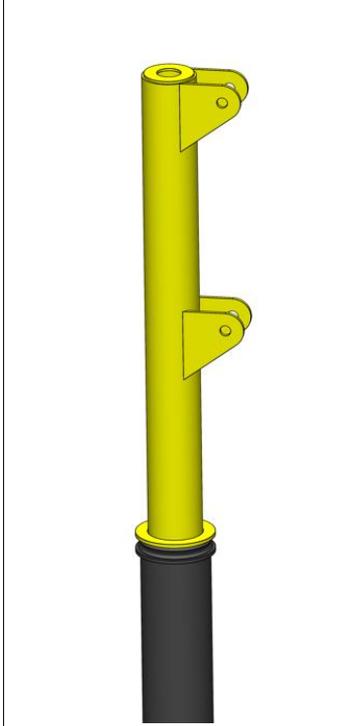



(EN) Figure-6.6 /  
(TR) Şekil-6.6

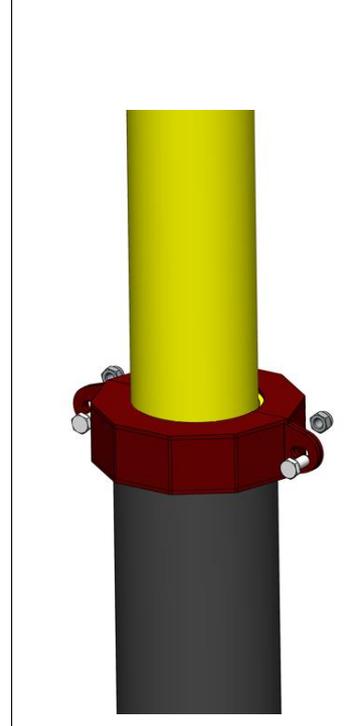


(EN) Figure-6.7 /  
(TR) Şekil-6.7

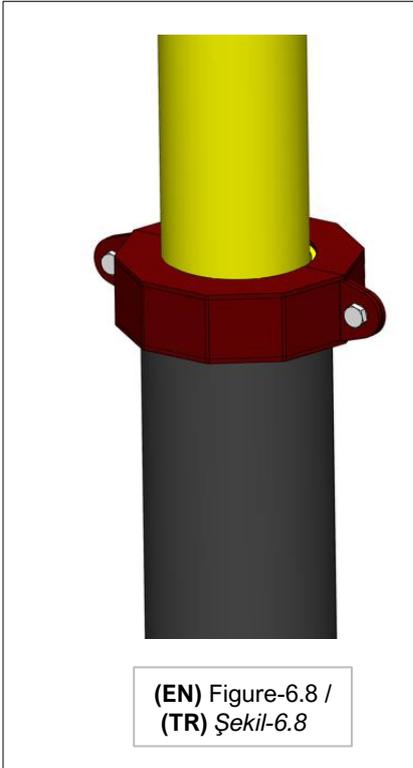

(EN) Figure-6.8 /  
(TR) Şekil-6.8

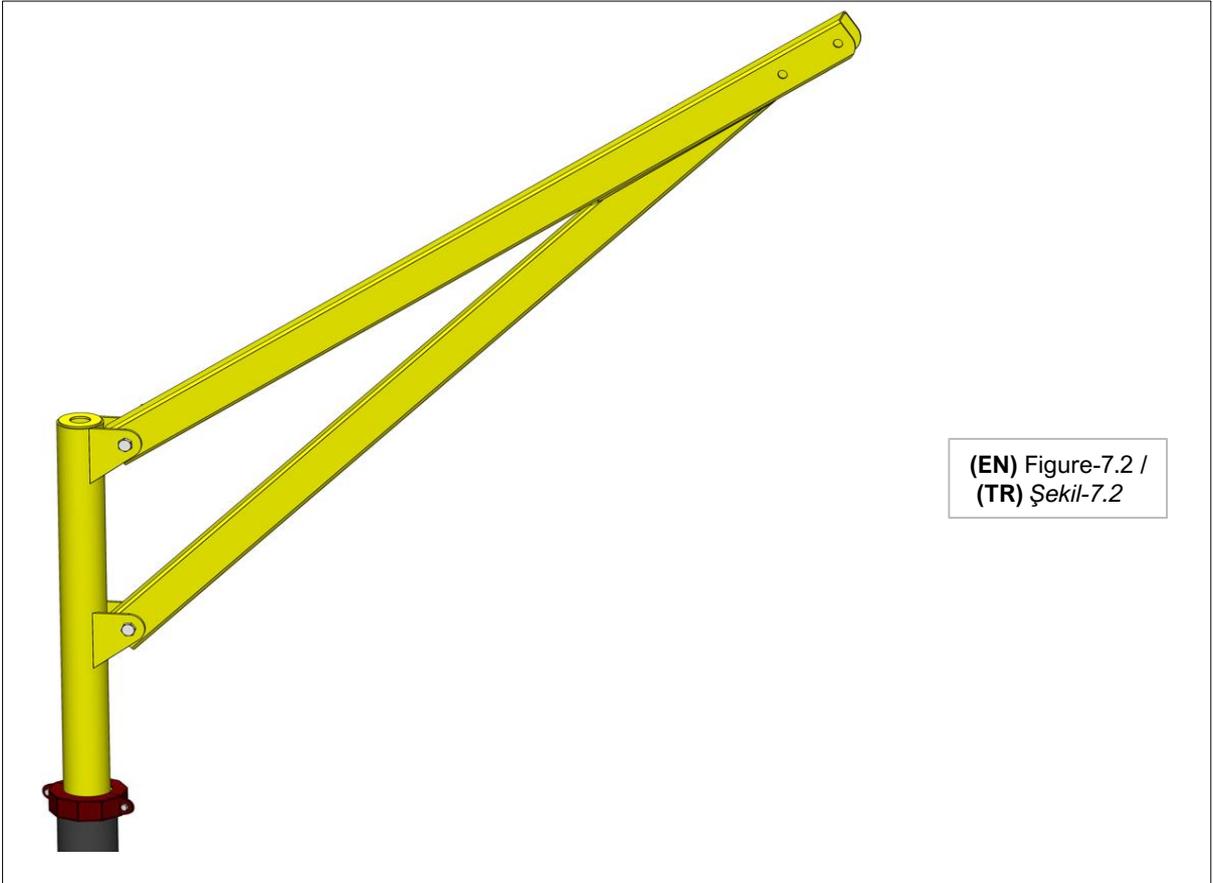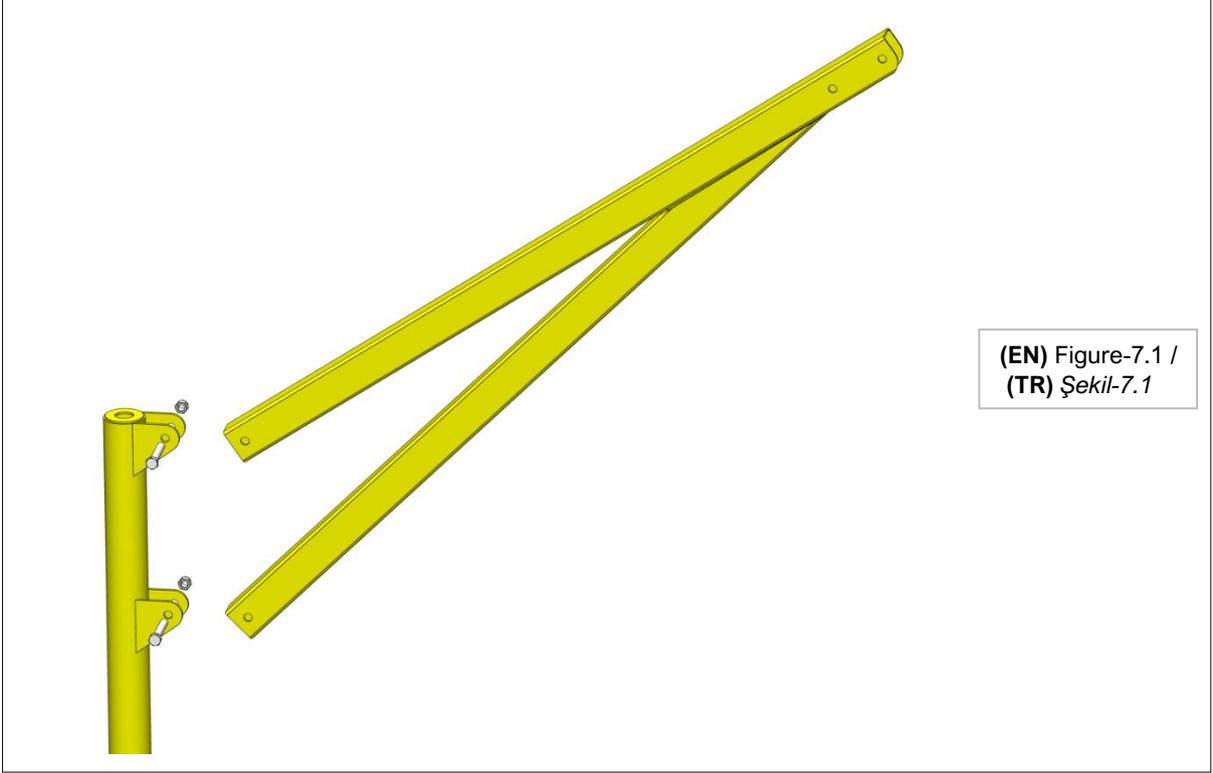

These instructions explain how to correctly use your equipment. Only certain techni (EN)- English, (TR) - Turkish

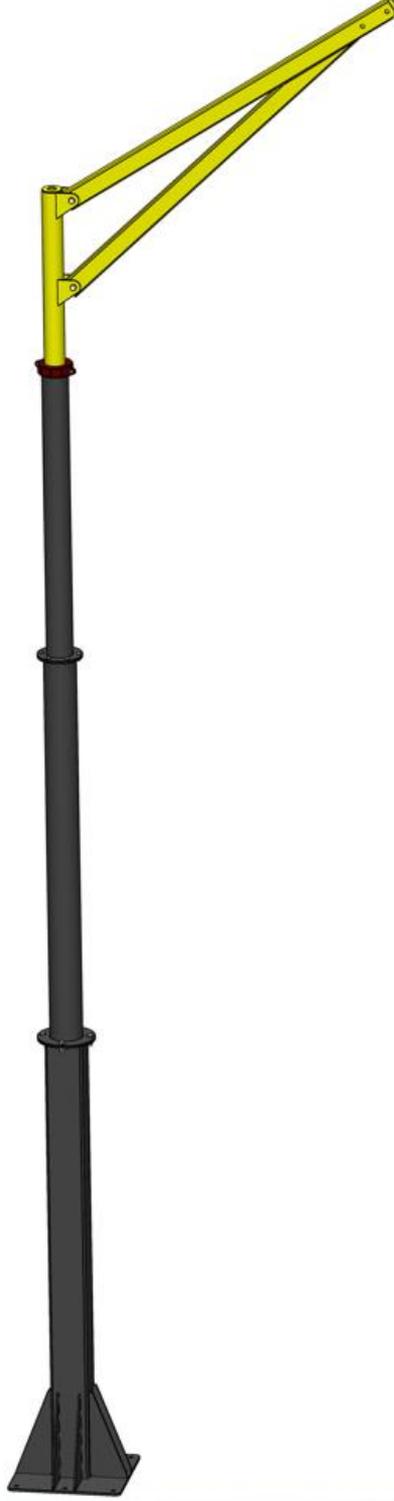

(EN) Figure-8 /  
(TR) Şekil-8

The warning symbols inform you of some potential dangers related to the use of your equipment, but it is impossible to describe them all.

You are responsible for heeding each warning and using your equipment correctly. Any mis use of this equipment will create additional dangers. Contact ARGA SAFETY if you have any doubts or difficulty understanding these instructions.

## 1- Area of Use

MIRACLE 360 is a type A anchor device (EN 795: 2012 type A and CEN/TS 16415:2013 Type A) for protection against falls from height.

- Use only two-person.

## 2- Responsibility

- Make sure that you have read and understand of this user guide.
- The users must read and fully understand these instructions or have the instructions explained in detail before using this equipment. Failure to observe these instructions could result in serious injury or death.
- Working at height is acknowledged as one of the most dangerous activities that cause fatal accidents. Prior to use, all workers must be trained in the proper use of the systems. A training and instruction review should be repeated at regular intervals.
- MIRACLE 360 must not be used for anything other than its intended purpose.
- When the anchor device is used as part of a fall arrest system, the user has to be equipped with a means of limiting the maximum dynamic forces exerted on the user during the arrest of a fall to a maximum of 6 kN.
- MIRACLE 360 must be connected to an anchor point, which is marked with "A", on the back or chest of a full body harness (EN 361) and using a retractable fall arrester (EN 360) or energy absorber lanyard (EN 355).
- The anchor device should only be used for personal fall protection equipment and not for lifting equipment.
- A full body harness is the only acceptable body holding device that can be used in fall arrest system.

## 3- Raw material:

- MIRACLE 360 is made of S235JR grade steel.
- Screw is made of A2 grade stainless steel.

## 4- Anchor Point (EN 795:2012 Type A, CEN/TS 16415:2013 Type A) (EN 365:2004)

MIRACLE 360 is suitable for use of maximum two user at a time.

### 4.1- Installation Steps

- 1- Installation of the MIRACLE 360 anchor must be performed by persons who has trained for installation and authorized by ARGA SAFETY. The responsibility entire system belongs to the company or person that has performed the installation.
- 2- Each part of MIRACLE 360 weights can be more than 25 kg, so at least 2-3 people are needed for transportation and installation or get support from a forklift. The weight of each part is **(Figure-2)**:
  - M1S-160 First Step **weight: 89.690 gram.**
  - M2S-160 Second Step **weight: 46.900 gram.**
  - M3S-114 Third Step **weight: 32.900 gram**
  - HBC-10 Head Bearing Cover **weight: 18.650 gram**
  - M4S-89 Fourth Step **weight: 21.168 gram**
  - MC-150 Console **weight: 22.760 gram**
- 3- MIRACLE 360 anchor is designed to create an anchor point on concrete C20/25 quality.

- 4- The anchor must be installed on eight (8) bolt of which minimum breaking strength is 25 kN. Diameter of the screw must be Ø16 mm length 300 mm and A2 quality stainless steel
- 5- The force to the structure arises from a fall will be the same direction with the fall and the maximum force which is going to be generated, will be 13 kN.
- 6- Check the quality of the supporting medium around the anchor. Make sure the concrete is solid and uniform. **(Figure-3.)**
- 7- After cleaning the drilling area of any concrete, drill eight (8) hole of the diameter Ø 16 mm and 300 mm depth. **(Figure-3.1.)**
- 8- Clean the hole with a brush, then with a blower.
- 9- Push the bolt with the M1S First Step 160x160x6 mm into the hole and tighten the nut to the recommended torque (50 Nm).
- 10- Put the M2S-160 on the M1S-160 and tighten 4 pieces, M16x40 A2 quality the bolt, spring washer and nut to the recommended torque (50 Nm). **(Figure-4, Figure-4.1 and Figure-4.2)**
- 11- Put the M3S-114 on the M2S-160 and tighten 8 pieces, M10x30 A2 quality the bolt, spring washer and nut to the recommended torque (50 Nm). **(Figure-5, Figure-5.1 and Figure-5.2)**
- 12- Connected M4S-89 Fourt Step as shown **(Figure-6-1 and Figur-6.6)** and put on the M3S-114 and tighten 2 pieces M10x30 mm A2 quality bolt, spring washer and nut to the recommended torque (50 Nm). **(Figure-6.7 and Figure-6.8).**
- 13- Put the MC-150 Console on M4S-89 and tighten 2 pieces, M12x80 mm A2 quality the bolt, spring washer and nut to the recommended torque (50 Nm). **(Figure-7.1and Figure-7.2)**
- 14- Put the on MC-150 Console front for create anchor point M12x80 mm A2 quality the bolt, spring washer and nut to the recommended torque (50 Nm). **(Figure-7.1and Figure-7.2)**

## MIRACLE 360 removal:

Unscrew the nut and remove the anchor device. Before reusing the MIRACLE 360, carry out a detailed inspection of it.

## 4.2. Fall Clearance

Before working with rebar anchor required fall clearance must be calculated to reduce the risk of hitting the ground or any obstructions at a lower level.

### Fall Clearance = D+A+B+C+X

**D:** Deflection occurred on the anchor after fall (500 mm)

**A:** Length of Lanyard

**B:** Length of completely ripped out shock absorber

**C:** Height of Suspended Worker

**X:** Clearance to obstruction during fall arrest

## 5. Supplementary information regarding standard; EN 365

### 5.1. Rescue Plan

While using the product, you must have a rescue plan to be recovered from a emergency or difficult situation immediately. Adequately trained personnel and rescue equipment must be on hand for rescue.

### 5.2. Anchor Point

The anchor point of the system comprises this product should preferably be located above the user or should at least located at the waist level of the user.

### 5.3. Various Situations

- In a fall-arrest system, it is essential to check the required clearance under the user before each use, to avoid any impact with the ground or an obstacle in case of a fall.
- Make sure that the anchor point is correctly positioned, in order to limit the risk and the height of a fall.

- When using multiple pieces of equipment together, a dangerous situation can result, if the safety function of one piece of equipment is affected by the safety function of another piece of equipment. **Check;**
  - Sharp edges,
  - Chemicals,
  - Electrical conductivity,
  - Pendulum falls,
- Users must be medically fit for activities work at height.

**Warning:** The medical conditions that could affect the safety of the equipment user in normal and emergency use.

- Users must be medically fit for work at height activities in normal and emergency use “
- The instructions for use for each item of equipment used in conjunction with this product must be respected. The instructions for use must be provided to users of this equipment in the language of the country in which the product is to be used.

## 6. Control of product and validation

### 6.1. Before each use:

Working at height equipment must be inspected before each use and / or on a regular basis. All information must be recorded on product control book. Inspection must be performed based on following control criteria.

- Where the installation is being made must be checked for a deformation, crack.
- Product must be checked for on any wear or cracks,
- System components must be checked if they have been in contact with any corrosion.

**Warning:** It is essential for safety that equipment is withdrawn from use immediately should:

- 1) Any doubt arises about its condition for safe use or,
- 2) It has been used to arrest a fall, and not used again until confirmed in writing by a competent person that it is acceptable to do so.

### 6.2. During each use:

During performing the work at height if the equipment is connected with another system, make sure that all pieces of equipment in the system are correctly positioned with respect to each other.

## 7. General Information

### 7.1. Product Life:

- Unlimited lifetime. There is no theoretical lifetime of metallic materials. Products must be documented by at least one time per year to determine if the product is safe to use. ARGA SAFETY is not responsible for the use of the product that has no annual periodic control.
- Rebar anchor is made of galvanized steel and galvanized this material highly resistant to atmospheric corrosion. Depending on the area of the use superficial rust spots can be seen on the product (In a short time of a period industrial sites; iron powders and chemicals. Areas near sea water salt in the air like). These superficial stains can be removed with an appropriate maintenance program.

In all circumstances decision to continue to use the product can only be made if annual periodic control has been performed and resulted positive by manufacturer or a competent person authorized by manufacturer

If the product has one of the deviations below it should be withdrawn from service immediately and should be destroyed to prevent further usage.

- It has suffered a heavy shock load or has had a load dropped onto it.
- If observed signs of corrosion on the product
- If product was recorded not suitable for use during a control and if you have any doubt about that.
- Changes in standards, legislation and changes related to technical use of it, and similar cases.

## 7.2. Storage:

Product is sold with instruction manual for use and applied standards are written on the product sheet. Storage area of the product should meet following requirements;

- Dry, no direct sun light, room temperature
- Do not store together with acid, solvents etc.
- Keep away from direct heat sources.
- If the product humidity during the storage, dry the product in room temperature before usage.
- Keep aware from chemicals such as corrosive and acids.
- Storage always in the product bag.

## 7.3. Maintenance and cleaning:

Taking good care of the product after each use extends the life of it. Use metal cleaners to clean the product. For detailed information please contact us on [info@argasafety.com](mailto:info@argasafety.com)

- Clean the equipment including disinfection where applicable, without causing adverse effect on the materials to the user.

### Warning:

- The procedure is to be strictly.
- When the equipment becomes wet, either from being in use or when due to cleaning, it shall be allowed to dry naturally, and shall be kept away from direct heat.

## 7.4. Changes and repair

Changing a part, repair and addition to any component of the system is strictly forbidden without written authorization of ARGASAFETY. Any repairs on products can only be done by manufacturer or qualified persons authorized by the manufacturer. All repair and maintenance work must only be performed in accordance with manufacturer's instructions ARGASAFETY won't be responsible for repairs performed by for unauthorized persons.

Manufacturer's instructions for repair and maintenance can be obtained from authorized distributor in the official language of the country in which the item is in service. Please contact authorized distributor in your country.

## 7.5. Transportation of product:

The product should be transported in a bag to keep it away from moisture, chemicals and sharp edges as well as to protect it getting in contact with another objects.

## 7.6. Periodic examinations/inspection:

The safety of users depends upon the continued efficiency and durability of the equipment. This anchor needs regular periodic control.

Product must be inspected at least one time in a year by manufacturer or a competent person authorized by manufacturer. Product is going to be marked with a sticker that includes the date of the next or last inpection by ARGASAFETY Inspector.

### **During the inspection of product following information should be recorded (Use record label):**

- Check the legibility of the product markings
- Type of the product,
- Model,
- contact information of producer,
- serial number,
- Date of purchase,
- Date of installation date,
- Next inspection date,
- Problems,

- Recommendations,
- Name and surname of inspector and signature,

For further information visit [www.argasafety.com](http://www.argasafety.com)

## 7.7. Guarantee:

This product has 10-year guarantee against all material or manufacturing defects under proper usage and storage conditions. Guarantee is no more valid if; product is used wrong, tears, cut, corrosion, unauthorized repair or changes on the product, damages caused by accidents.

## 7.8. Declaration Of Conformity

For the check declaration of conformity on our web site: [www.argasafety.com](http://www.argasafety.com) or ask us [info@argasafety.com](mailto:info@argasafety.com)

**Manufacturer** : ARGA İŞ GÜVENLİĞİ VE ENDÜSTRİYEL ÜRÜNLER. A.Ş.  
**Address** : Tuna Mah. 5500/3 Sok. Irmak Plaza No:2 P.K.:35090 Çamdibi- Bornova- İzmir / TURKEY  
**Telephone** : + 90 232 469 69 39  
**Fax** : + 90 232 457 50 57  
**e-mail** : [info@argasafety.com](mailto:info@argasafety.com)  
**web** : [www.argasafety.com](http://www.argasafety.com)

## 7.9. Examinations Records:

| ARGA<br>SAFETY  |                                   | ANCHOR DEVICE<br>ANNUAL PERIODIC EXAMINATIONS RECORDS |                          |
|---|-----------------------------------|---|--------------------------|
| <b>User Information</b>   |                                   | <b>Anchor information</b>                             |                          |
| Company   |                                   | Producer / Trade Mark                                 |                          |
| Adress  |                                   | Model   |                          |
|   |                                   | Serial number   |                          |
|   |                                   | Chief installer                                       |                          |
|   |                                   | Date of purchase                                      |                          |
| Are of Anchor   |                                   | Installation date                                     |                          |
|   |                                   | Last inspection date                                  |                          |
| <b>History</b>  |                                   |   |                          |
| Expectional event during use or usage conditions<br>(Exmp:Modification, use or storage at extrem temperatures,<br>fall or fall arrests)   |                                   |   |                          |
| <b>Control Points</b>   |                                   | <b>Repair</b>   | <b>Can use</b>           |
| <b>Observations</b>   |                                   |   |                          |
| • Verify legability of serial number and etc.   |                                   |   |                          |
| • The lifetime has not been exceeded.   |                                   |   |                          |
| • Any modifications or missing parts.   |                                   |   |                          |
| <b>Chenck the metal parts</b>   |                                   |   |                          |
| • Check any cuts, teras, cracks, abrasion, deformation, corrosion, cuts, etc.   |                                   |   |                          |
| <b>Chenck conditions</b>  |                                   |   |                          |
| • Check any cracks, abrasion, deformation, corrosion, cuts, etc.  |                                   |   |                          |
| <b>Chenck Anchor Point</b>  |                                   |   |                          |
| • Check any cracks, abrasion, deformation, corrosion, cuts, etc.  |                                   |   |                          |
| <b>Chenck Screwa and nuts</b>   |                                   |   |                          |
| • Check any cracks, abrasion, deformation, corrosion, cuts, etc.  |                                   |   |                          |
| <b>Comments:</b>  |                                   |   |                          |
|   |                                   |   |                          |
| <b>Warning:</b> The periodic examinations are only to be conducted by a competent person for periodic examination and strictly in accordance with the manufacturer's periodic examination procedures. |                                   |   |                          |
| <b>Decision</b>   | Can use. <input type="checkbox"/> | Can not use.  | <input type="checkbox"/> |
| <b>Inspection Date:</b>   |                                   | <b>Next inspection date:</b>                          |                          |
| <b>Responsible person</b>   |                                   | <b>Chief Inspector Name and surname:</b>              |                          |
| <b>Signature</b>  |                                   | <b>Signature</b>                                      |                          |
| ARGA İŞ GÜVENLİĞİ VE ENDÜSTRİYEL ÜRÜNLER A.Ş.   |                                   |   |                          |
| Tuna Mah. 5500/3 Sk. İrmak Plaza No:2 P.K.:35090 Çamdibi -Bornova - İZMİR / TÜRKİYE   |                                   |   |                          |
| Tel: 0 232 469 39 69 Fax: 0 232 457 50 57 www.argasafety.com info@argasafety.com  |                                   |   |                          |
|   |                                   |   | S. 1/1                   |